



HOW TO PRINT CERAMICS

www.smalldogprints.com



Silkscreen Medium
is used to
thicken underglaze.

1/4 tsp Medium + 2 oz underglaze



Mark 2 oz. water on a
disposable cup & discard.



Fill cup with
underglaze.



Add 1/4 tsp. Medium
a BIT at a time.
ie. sprinkle, blend well,
sprinkle, blend well, etc.



Blend well - about 15 min.




To help w positioning of
stencil for REPEAT printing:

Add tape "markers" to each side
of the top (& sides if necessary)
BEFORE you begin printing.




Use a stiff brush...

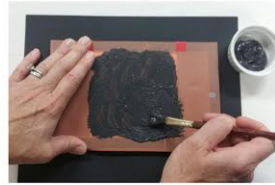

... and cover ALL open
design areas.



Peel up stencil.

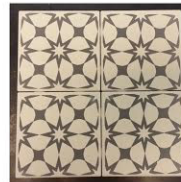

Dip.



Dry.



Fire.



Waaalaaa!!

Note:

- * When printing ceramics ALWAYS use thickened underglaze.
- * Thickened underglaze should resemble the consistency of paste.